



Electrolux

Instruction Book

使用說明手冊

사용 설명서

Sách Hướng Dẫn

Buku Petunjuk

 
Penghisap Debu Kering dan Basah
(Nomor MKG: IMKG.1879.08.2024)

คู่มือการใช้งาน


کتاب التعليمات

800 WET&DRY CORDLESS CLEANER

EW82U2DB / EFW81713




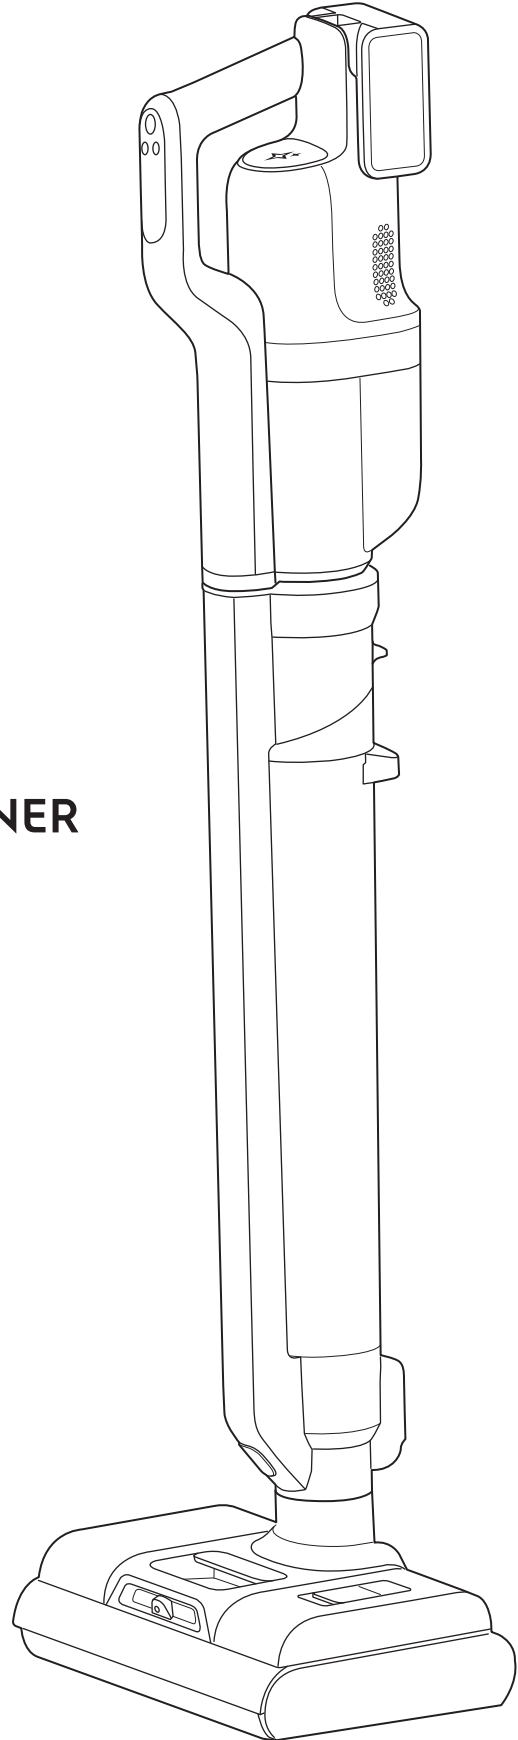






 
*Actual product may differ from illustration.

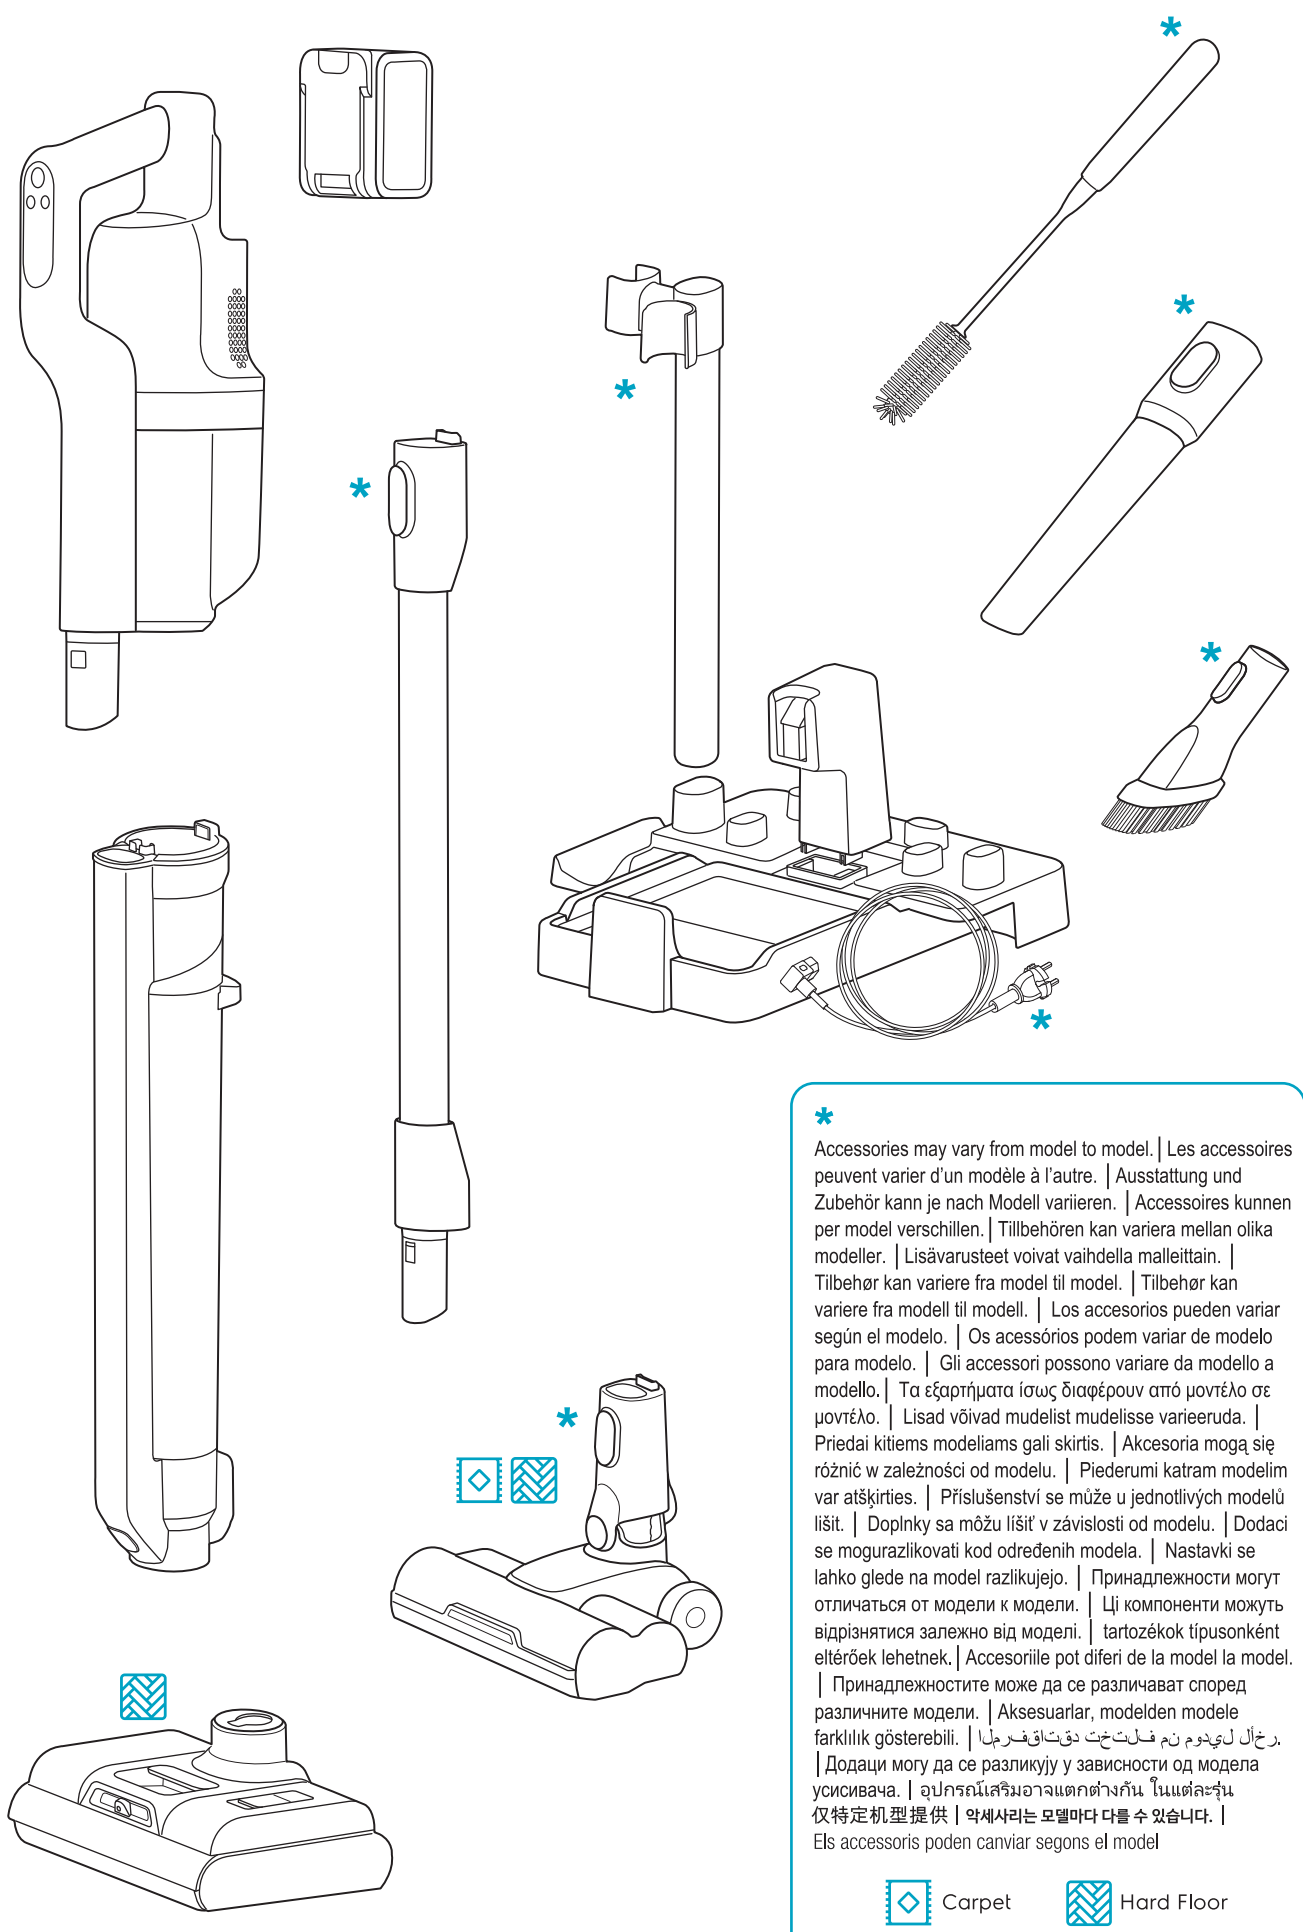


* Accessories may vary from model to model. | Les accessoires peuvent varier d'un modèle à l'autre. | Ausstattung und Zubehör kann je nach Modell variieren. | Accessoires kunnen per model verschillen. | Tillbehören kan variera mellan olika modeller. | Lisävarusteet voivat vaihdella malleittain. | Tilbehør kan variere fra model til model. | Tilbehør kan variere fra modell til modell. | Los accesorios pueden variar según el modelo. | Os acessórios podem variar de modelo para modelo. | Gli accessori possono variare da modello a modello. | Τα εξαρτήματα ίσως διαφέρουν από μοντέλο σε μοντέλο. | Lisad võivad mudelist mudelisse varieeruda. | Priedai kitiems modeliams gali skirtis. | Akcesoria mogą się różnić w zależności od modelu. | Piederumi katram modelim var atšķirties. | Příslušenství se může u jednotlivých modelů lišit. | Doplnky sa môžu líšiť v závislosti od modelu. | Dodaci se mogurazlikovati kod određenih modela. | Nastavki se lahko glede na model razlikujejo. | Принадлежности могут отличаться от модели к модели. | Цijи компоненти можуть відрізнятися залежно від моделі. | tartozékok típusonként eltérőek lehetnek. | Accessoriile pot diferi de la model la model. | Принадлежностите може да се различават според различните модели. | Aksesuarlar, modelden modele farklılık gösterebilir. | إدخال لي دودوم نم فلتخت دقتا قفرملا. | Додаци могу да се разликују у зависности од модела усисивача. | อุปกรณ์เสริมอาจแตกต่างกัน ในแต่ละรุ่น. | 仅特定机型提供 | 액세서리는 모델마다 다를 수 있습니다. | Els accessoris poden canviar segons el model



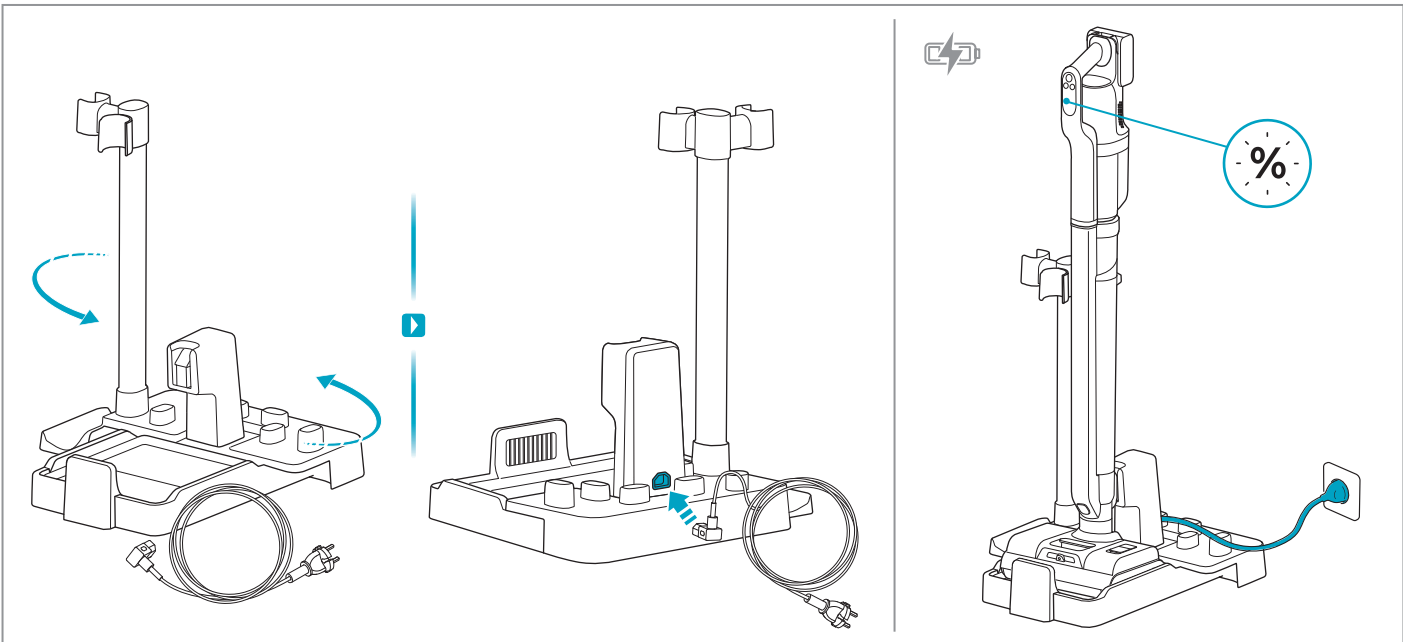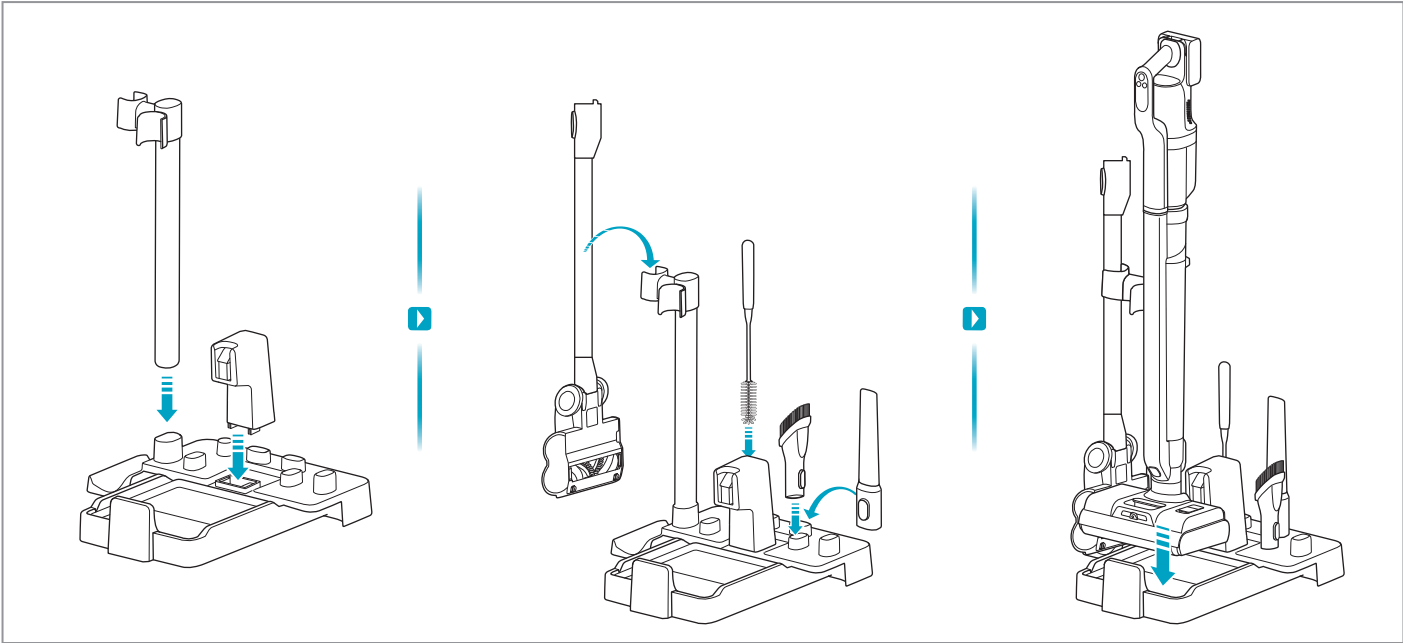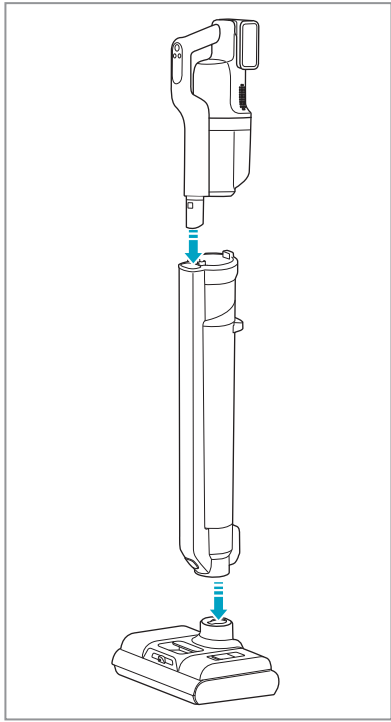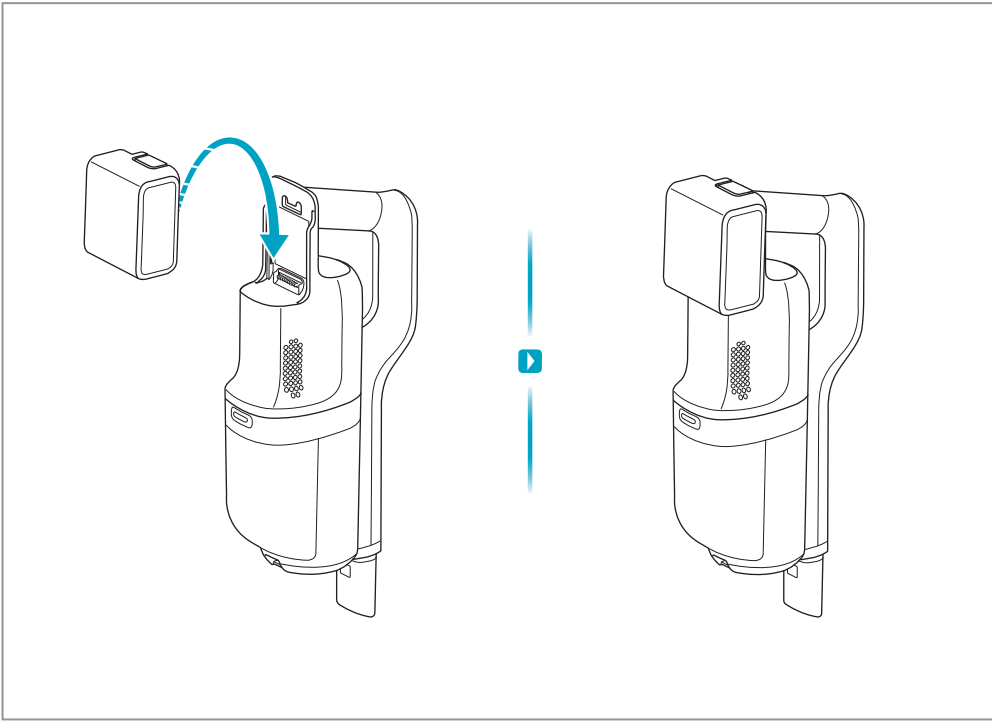    

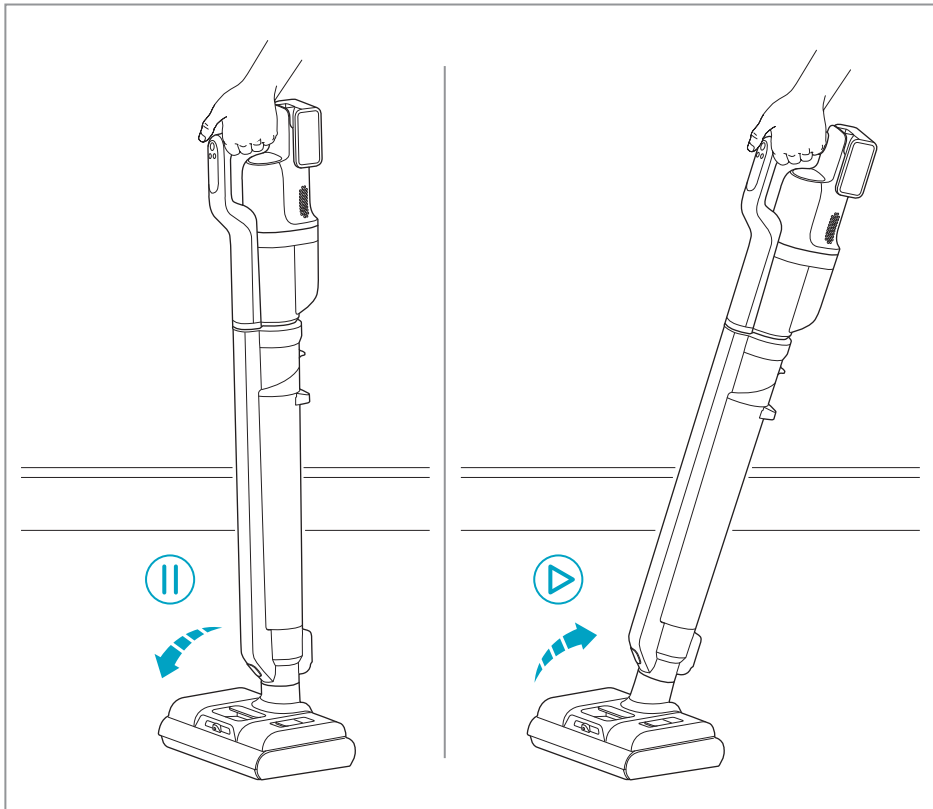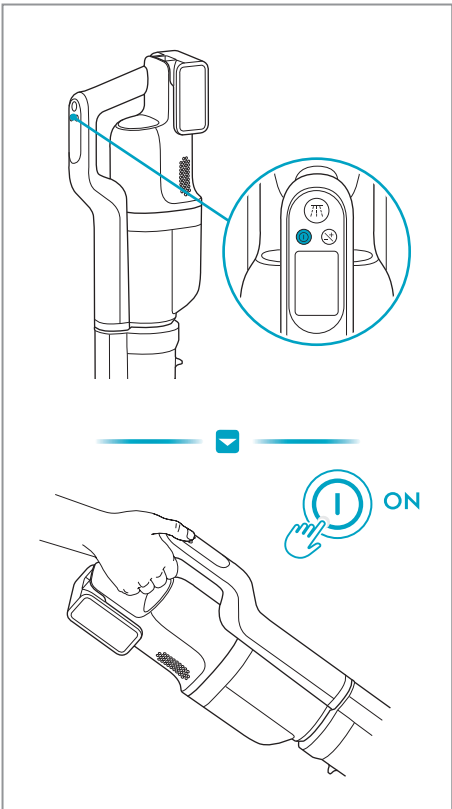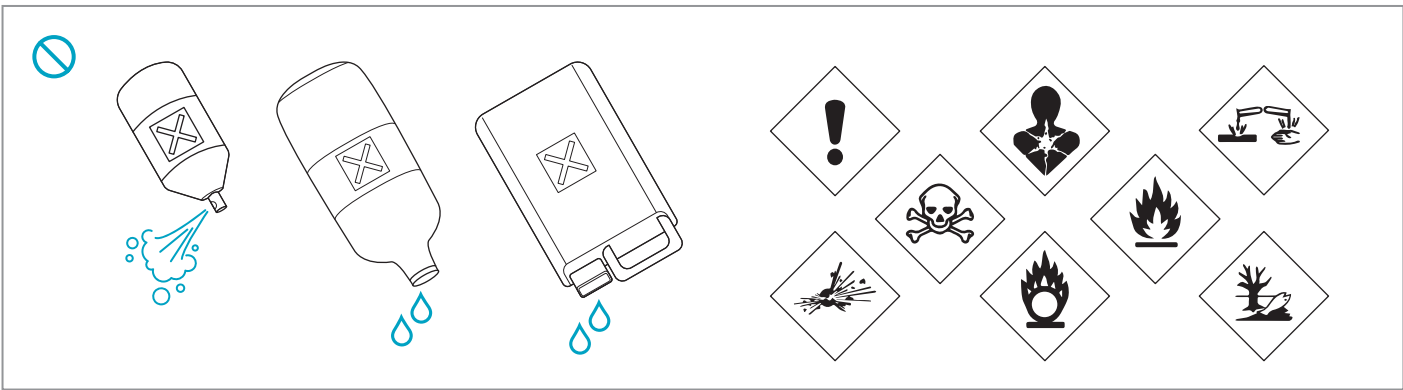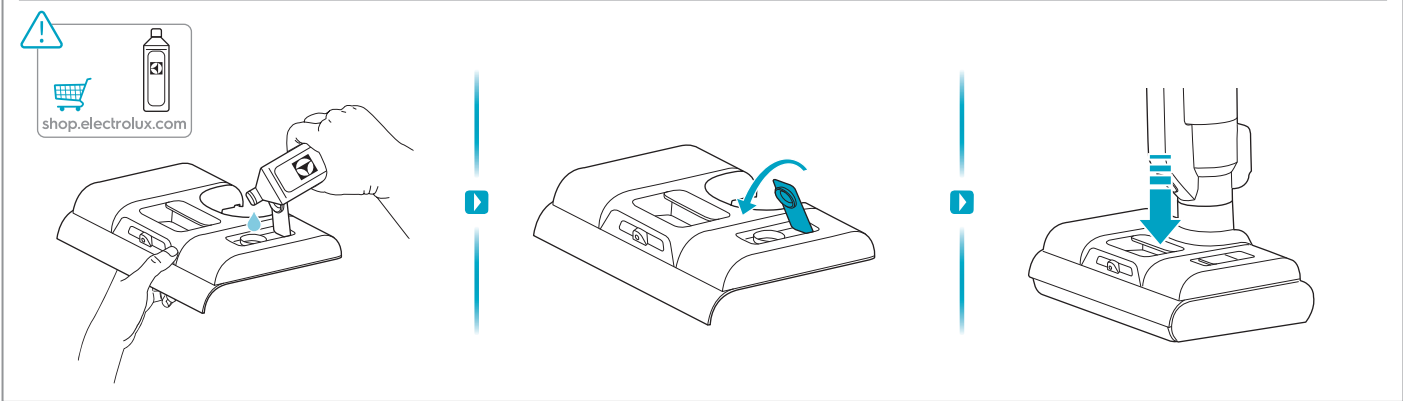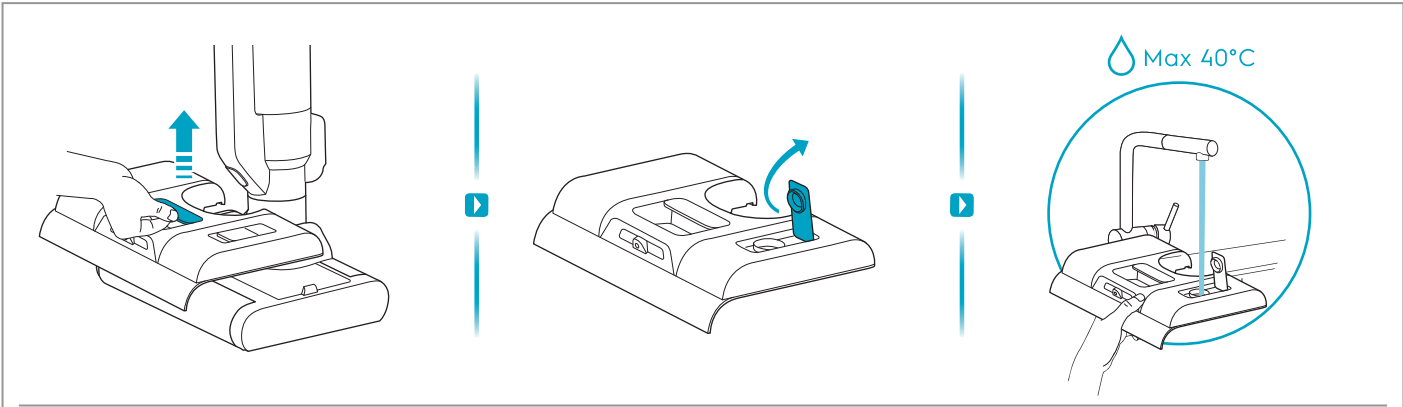     

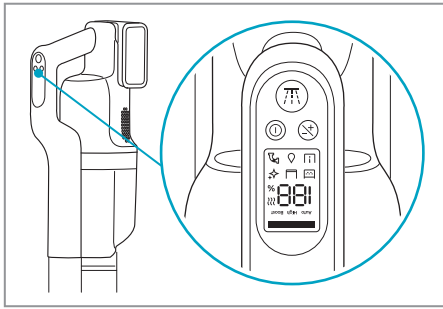 

Auto	⚡ ⚡ ⚡	 Auto ✓ High ✗ Boost ✗
High	⚡ ⚡	
Boost	⚡ ⚡ ⚡	

100%
0-100%

⚠

⏪ → ⏩ / ⏸

⌚ ≈ 3hrs

MAX

⏪

Δ ≈ 0%

⚠

💧

⚠

Auto High Boost

100%

⏪ ⏩ ⏸

⚠

⚡ ⚡ ⚡

ON OFF

MAX

ON

⚡

⏪

⏩

⏸

⌚ 2mins

 
 
⌚ 5mins

 
 
 
 
⌚ 3hrs

 
 
 
 
 
 
 
 
 
 
 
 
 
 
⚡ : ⏪ → ⏩

 
 
✗

✗

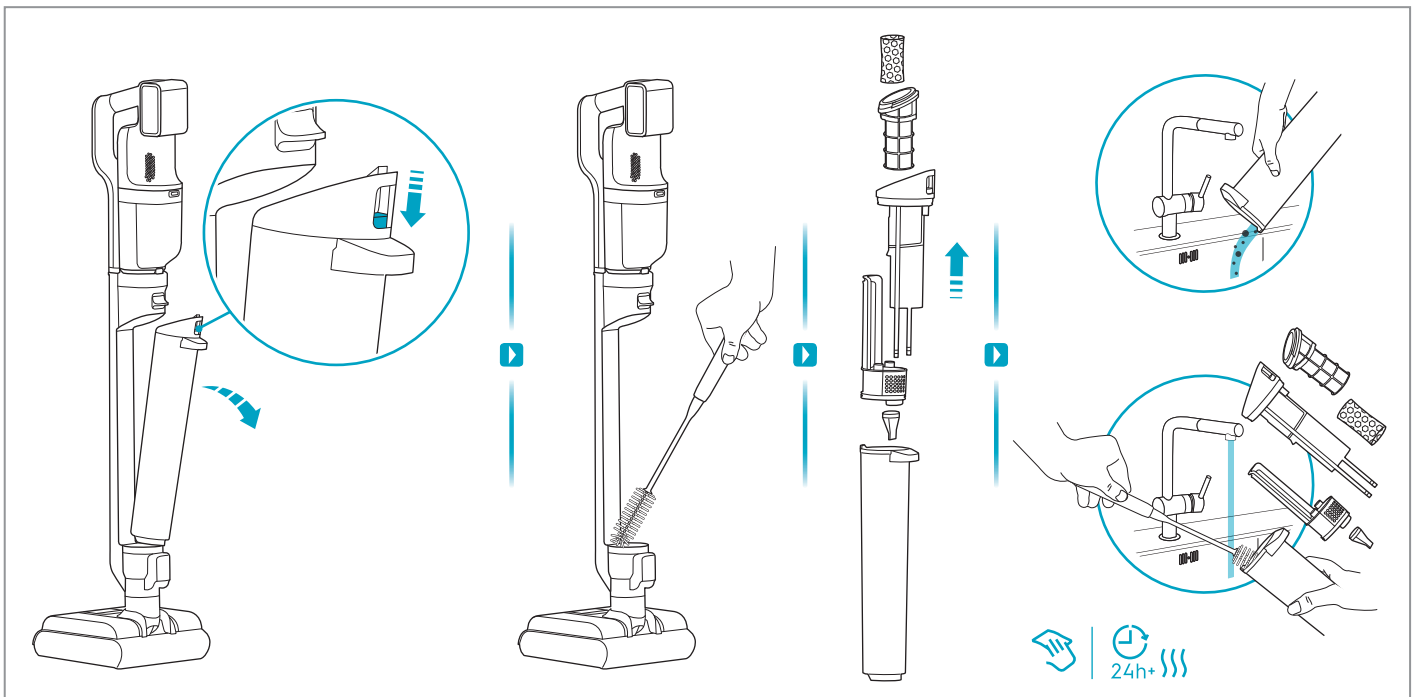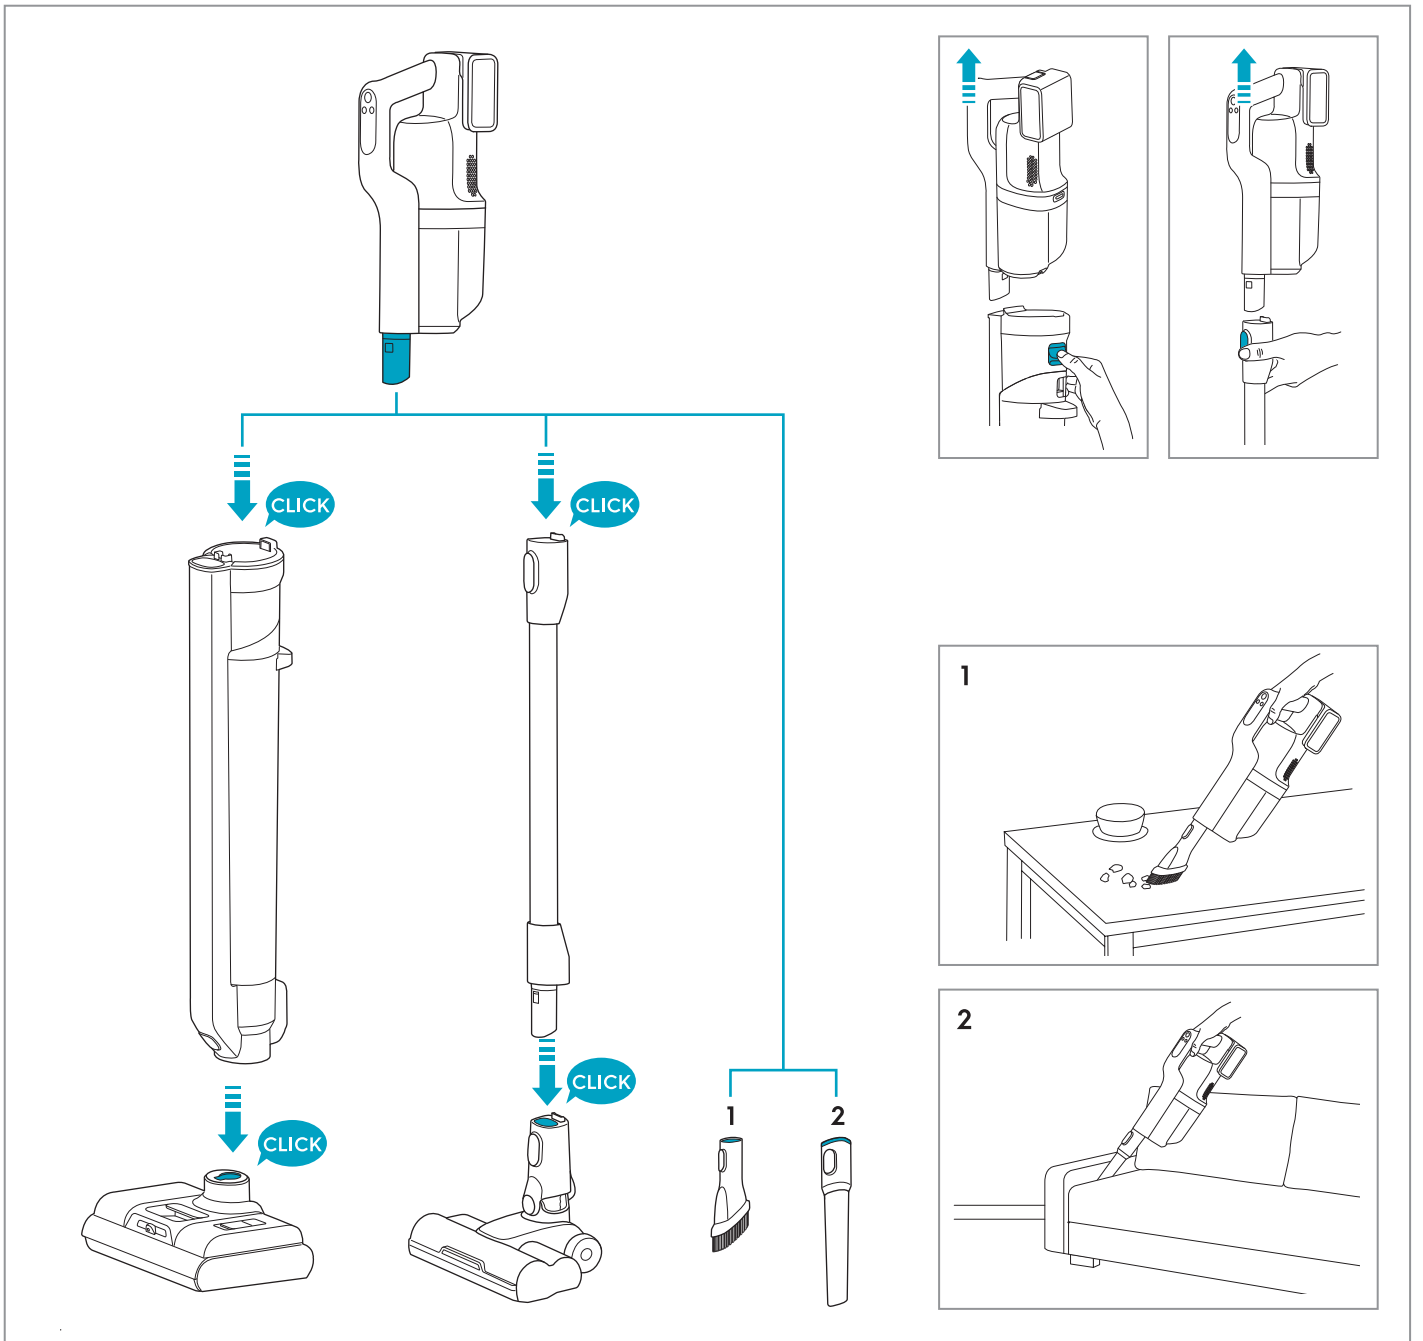


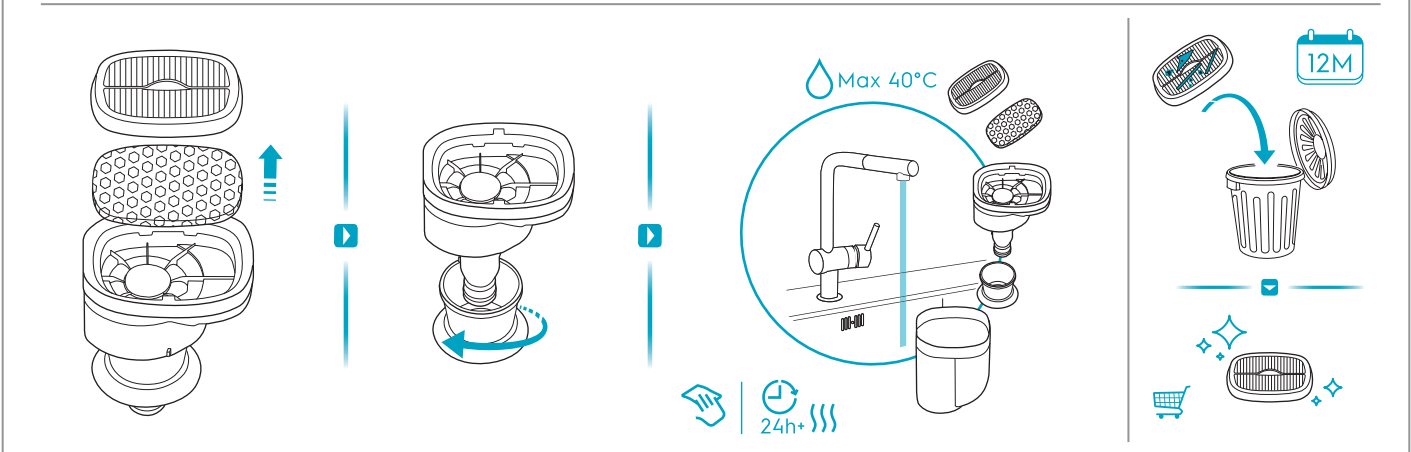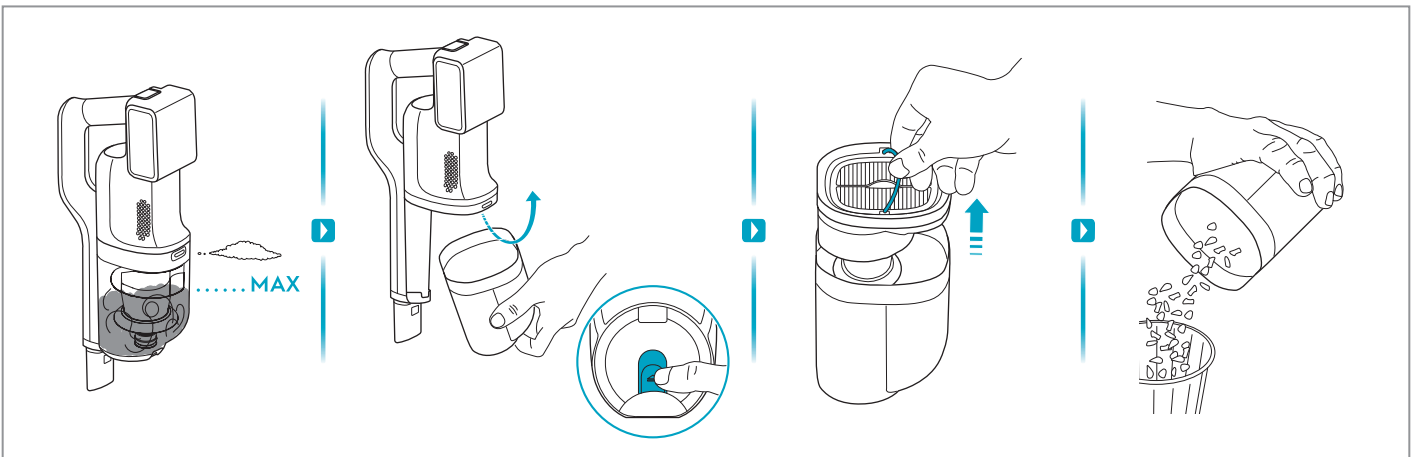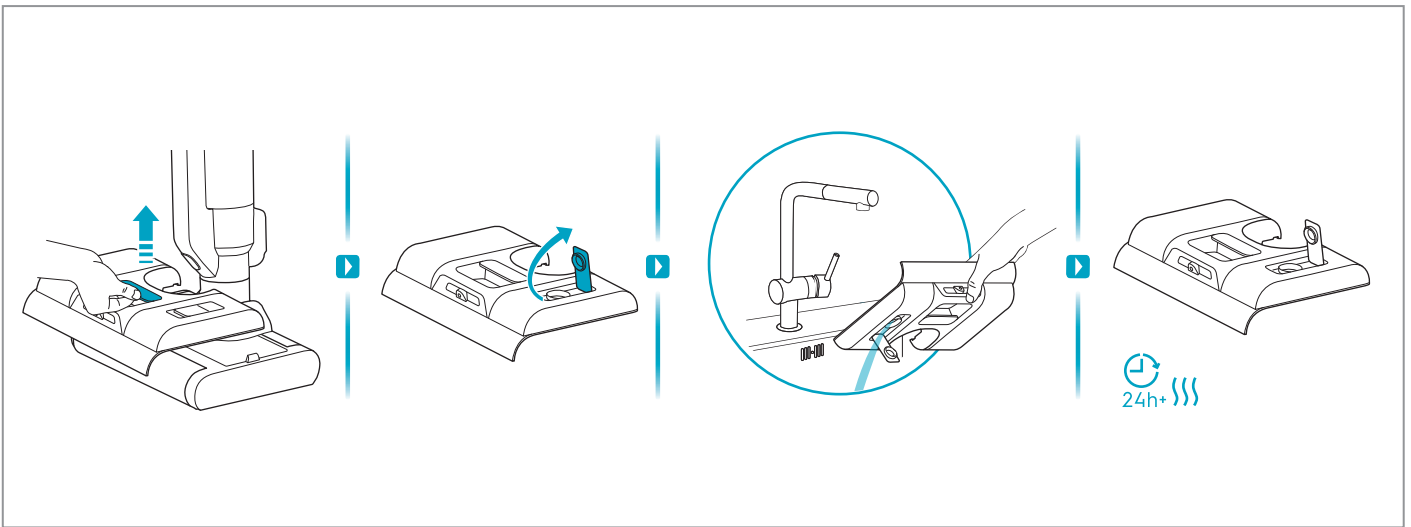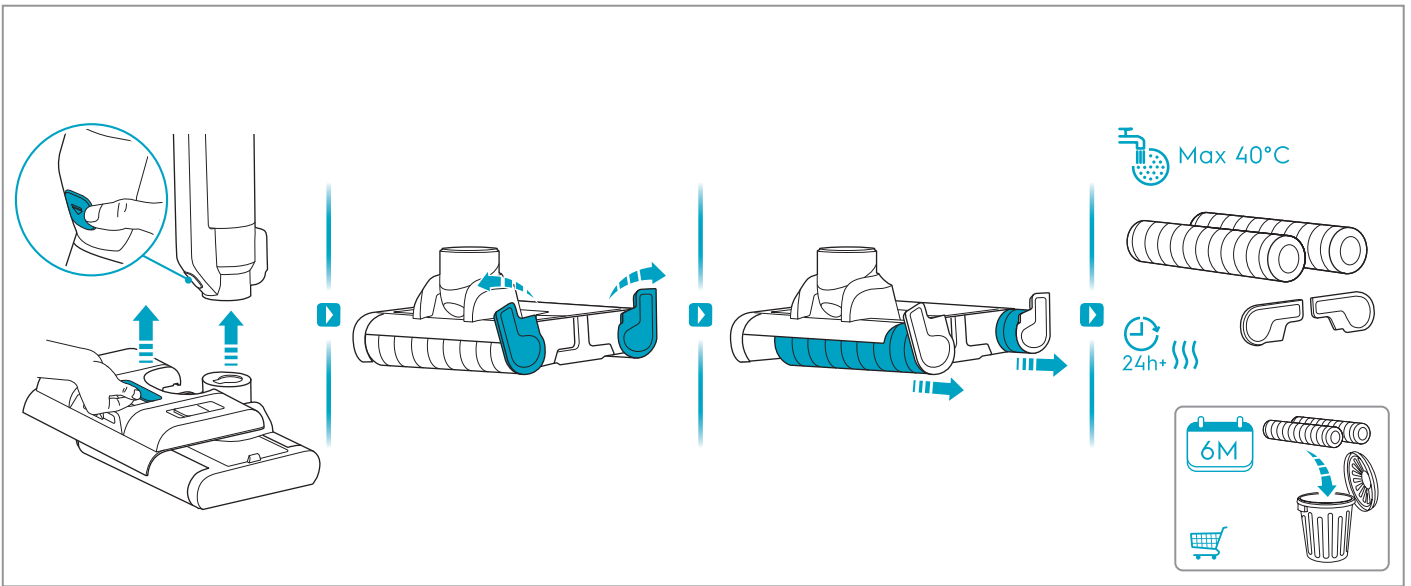

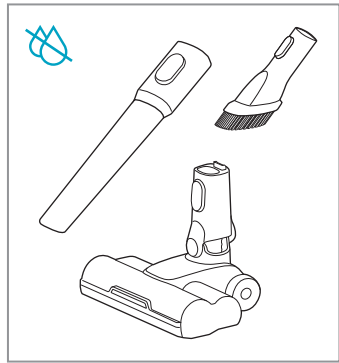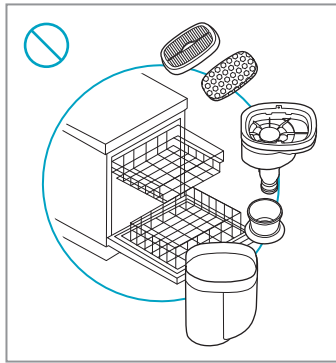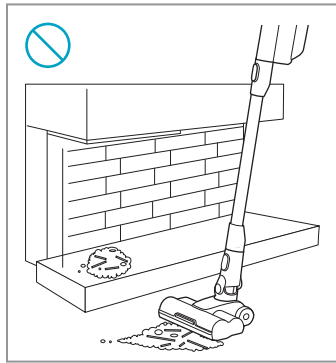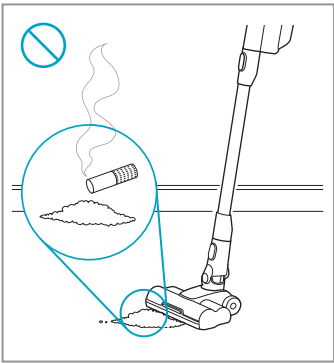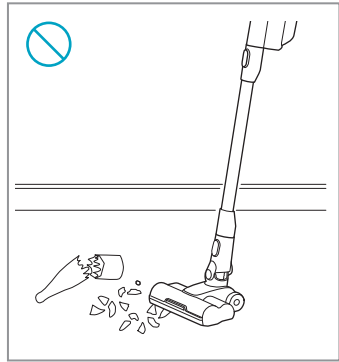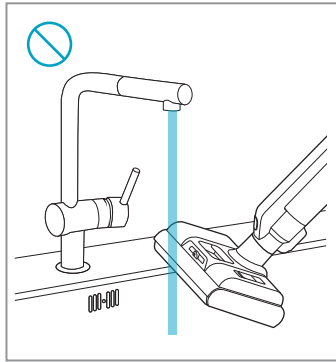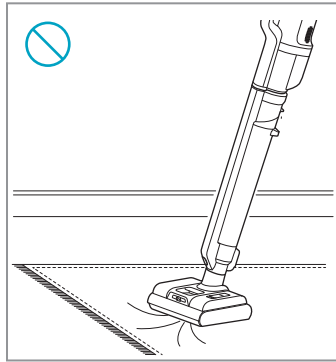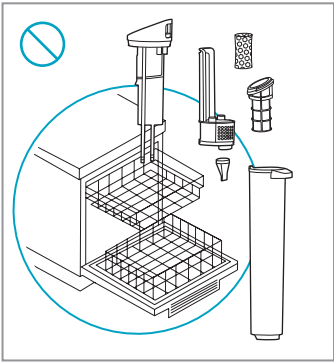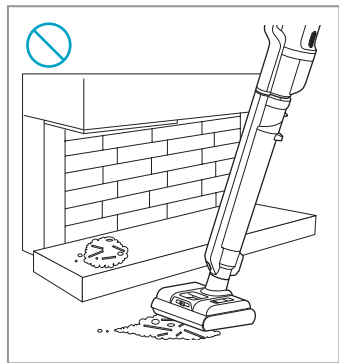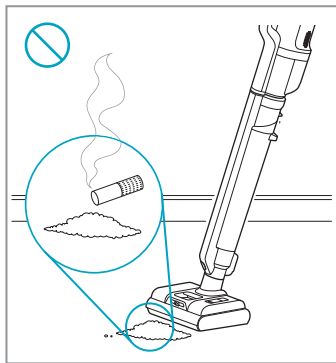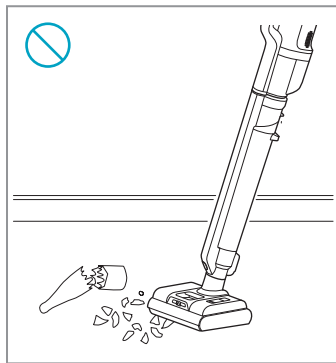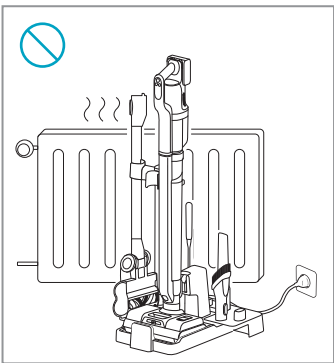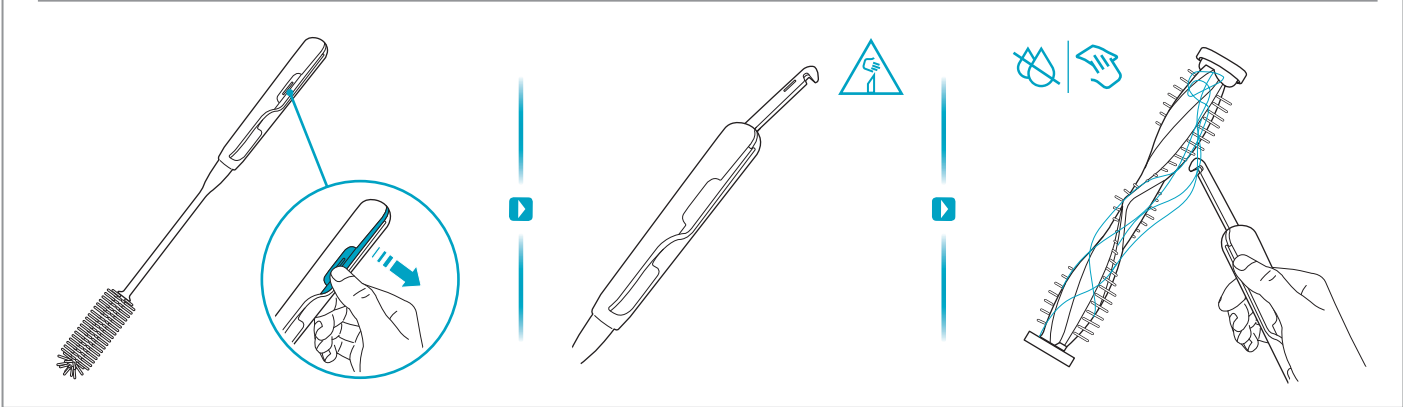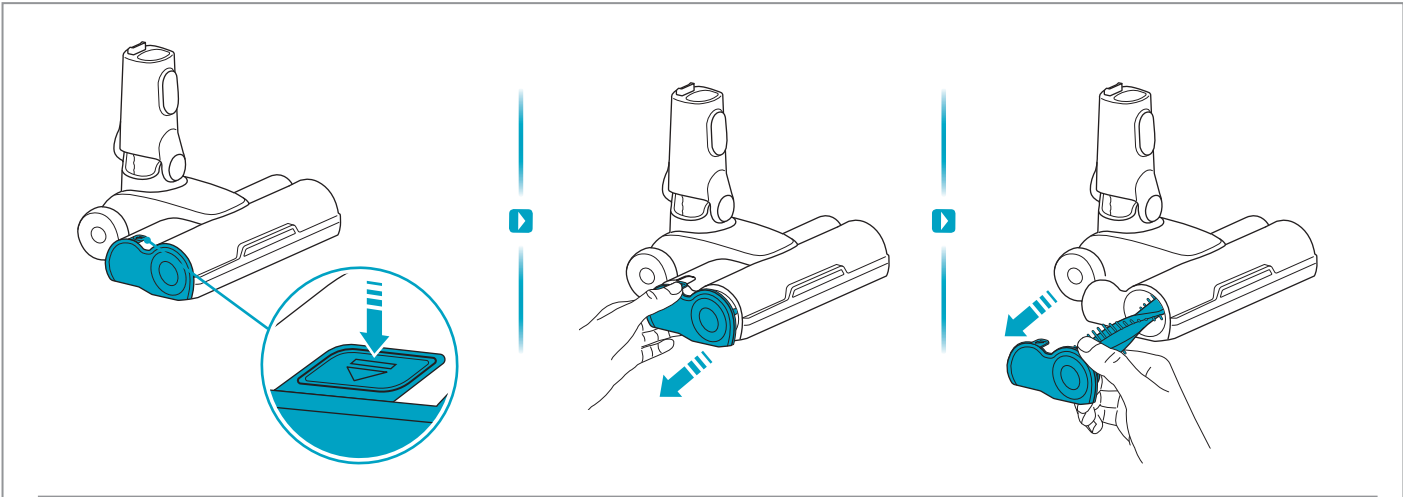

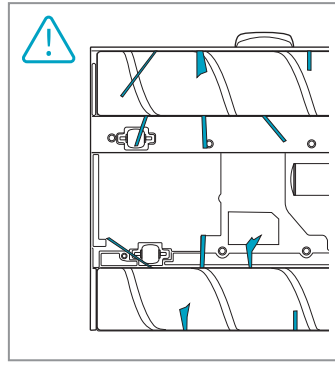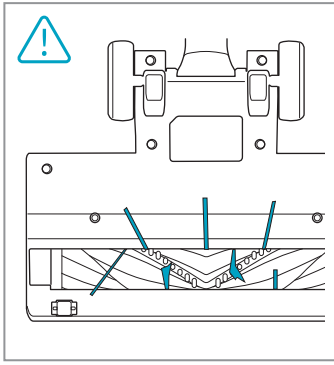


 www.shop.electrolux.com

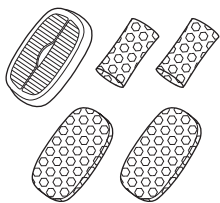 


Filter Kit

 EF163
900 923 808



Brush Roll

 ZE191
900 923 809



Detergent

EHFLC3 / FLD1
900 923 819 / 900 923 782

*Accessories may vary by market.

